

Bus Compressor

- **Threshold** - Controls the level at which the compressor begins to act
- **Make Up** (Output Gain) - Allows the user to make up for level lost due to gain reduction/compression
- **Attack** - Controls how quickly the compressor begins to act once the signal exceeds the threshold
- **Release** - Controls how quickly the compressor stops acting once the signal drops below the threshold
 - Auto - "program controlled" release
 - Fast transients = faster release
 - Slow transients = slower release
- **Ratio** - Controls the input-to-output ratio once the signal exceeds the threshold
- **"IN" Switch** - Inserts the compressor on the stereo bus

